


Panoramic Power™ Bridge (Cellular) installation quick guide



- Bridge full installation manual**
- Bridge installation video**
- Get in touch with Support**

➔ Configuration and installation¹

- ✓ Note the serial number on the front of the bridge, which you will need later during software installation.
- ✓ Twist both antennas onto the top of the bridge in their appropriate positions (Rx-2 to Rx-2 and LTE-2 to LTE-2).
- ✓ Power on the bridge with the AC adapter power supply provided.
- ✓ Hold down the black button at the bottom of the bridge until the left LED turns solid red, indicating Configuration Mode.
- ✓ Plug the bridge into a laptop/computer with an ethernet cable.
- ✓ Open an internet browser and type '10.0.0.10' into the address bar.²
- ✓ Click on 'Network Setup'. A window will pop up and ask for a username and password – use 'panpwr' for both.
- ✓ Select 'Cellular' from the 'Connection Type' dropdown menu.
- ✓ Type in the APN code (from the SIM Card provider).
- ✓ Click 'Save and Reboot' in the bottom left corner.
- ✓ If you are integrating a pulse meter to the bridge, click on 'Pulse Setup' and check the boxes next to the input channels that will have wire connections. Click 'Save' when finished.
- ✓ Disconnect the bridge from the laptop and its power supply.
- ✓ Bring the bridge to its designated location and plug it into a power source. Wait until the middle LED turns solid green.
- ✓ Install the bridge in its location with 3M tape, screws, or zip ties.

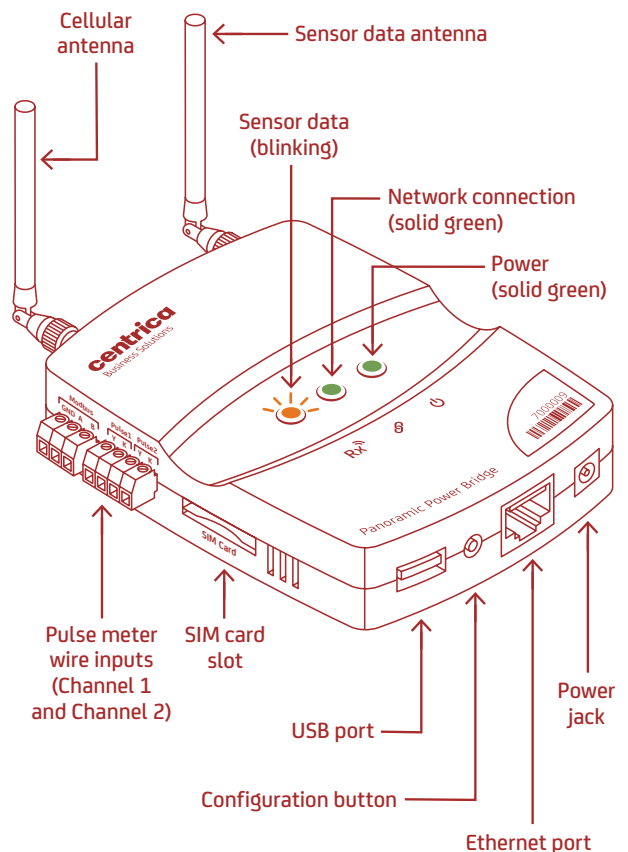

➔ Software installation³

1

Log in with your email and password at www.powerradar.energy.

2

Go to the Site Dashboard and click on the 'Deployment Tool' link.

3

Click on 'Edit Bridges', then '+Add a New' and select 'Bridge'.

4

Type the name and description of the bridge's location and type in the serial number.

5

Click 'Apply' when you are finished.



¹A SIM card is required. Insert the SIM card until it locks in place before configuring the bridge.

²If the Configuration Tool doesn't load after 5 minutes and/or 3 refreshes, put your laptop in airplane mode or disable Wi-Fi and try again.

³If you do not have login credentials, contact your PowerRadar™ account administrator.